

Lifting Equipment and Height Safety Specialists
Tel: +44 (0) 1977 684 600 Fax: +44 (0) 1977 685 300

Load Arrestor Information

Load arrestors are designed as fall protection for materials and serve a similar purpose to a sala fall arrest inertia reel as used for personal fall protection. The load arrestor, connected to a load, will stop a fall should it occur. The load arrestor will not only protect equipment attached to it, but also people and other items under the suspended equipment. The load arrestor is attached to a structure via the bolt holes. Equipment to be protected is to be attached to the wire rope. The wire rope is kept under tension and is automatically rewound on the wire rope drum . A drum spring will keep the wire rope under tension. If a fall occurs, a ratchet pawl will engage with a ratchet ring, when the wire speed exceeds 0.5 m/sec. The ratchet ring is then screwed into the cover and compresses the brake disc until all energy has been absorbed and the equipment safely held, undamaged by the wire rope. The break disc also pushes the indication pin through the cover. The indication pin protruding by a few millimetres. This indicating that the load arrestor should immediately be removed, serviced, and have the brake reset.

Features

The Load arrestor provides independent protection that will arrest the fall of a load in the event of the primary system failing and, as it is completely independent of the primary lifting system, it lowers the risk of equipment damage and protects workers in and around the area of the incident.

This range of load arrestors comes with safe working loads between 300kg and 3000kg, with a variety of wire cable lengths and arrest speeds.

The load arrestor is installed adjacent to the primary lifting device and fixed to a suitable anchorage point. Its retractable steel cable is then secured to the load. The wire rope is attached to the arrestor using an internal spring loaded drum that keeps the rope under a constant light tension yet allows unrestricted movement of the protected load.

If the primary lifting device fails, and the load begins to fall, the sala arrestor senses a descent speed in excess of the set arrest speed and automatically engages an internal inertia-activated mechanical brake that acts on the rope drum. This arrests the fall over a short distance to reduce the shock forces exerted on the load and the load arrestor.

Our range of load arrestors are primarily designed for indoor use though can be modified to suit outdoor use. When installing outdoor, please call the SELS representative for discussion about protecting the unit from icing, by example the use of a heating hood.

All Sala load arrestor standard units operate at a speed of 0.5 metres per second but there is choice of 0.3 and 1.0 metres per second operation but this needs to be stated at time of order. (Only 0.5 and 1.0 metres per second activation springs are available on the medium and large range)





Lifting Equipment and Height Safety Specialists
Tel: +44 (0) 1977 684 600 Fax: +44 (0) 1977 685 300


Servicing the Load Arrestor

Servicing should be carried out at 12 monthly intervals based on a standard working week with up to 60 cycles a day, but should not exceed 7000 cycles before servicing. This should be based on the users risk assessment, taking into account environmental and working conditions etc..

Then the servicing periods should be reduced accordingly. If the unit has arrested a fall or if the activation pin (fall indicator) is protruding is should be withdrawn from service immediately.

Multiple Load Arrestors - To Increase Capacity (Small, Medium and Large)

Under special circumstances sala multiple load arrestors can be used on a single application as confirmed by the manufacturer; tests have been carried out that proved that you can mount up to 4 load arrestors to a single item that requires fall protection (e.g. one for each corner), thus increasing the maximum potential arresting capacity. This works because there is a variance in the stopping distance, so all 4 units would work as designed. As the ratchet pawls will notengage simultaneously in two load arrestors, it is vital that the sala Load Arrestor are installed at a sufficient distance apart with unrestricted vertical movement under each unit to enable the falling force to be properly devided between them. Please contact our technical representatives before appyling this installation procedure.

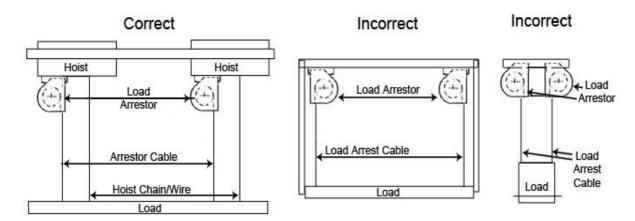

Load Arrestor used with a Pulley Sheave - For Increased Capacity

Combined with Pulley

The load arrestor can be combined with a pulley and can if properly installed, protect twice the nominal load but with half wire length capacity.

The load arrestor must for this application be ordered complete with pulleyand modified ratchet pawl springs to maintain engagement speed of O.5m/s. The wire rope should move in the same direction on both the wire drum and the external pulley.






Lifting Equipment and Height Safety Specialists
Tel: +44 (0) 1977 684 600 Fax: +44 (0) 1977 685 300

Pulley in Cramp Conditions

The sala Load Arrestor can be used in cramped conditions by using a pulley as shown below. The LoadArrestor must under all circumstances be installed so the wire drum is working vertically. For this application the anchorage point for the external pulley must be calculated according to specification table below.

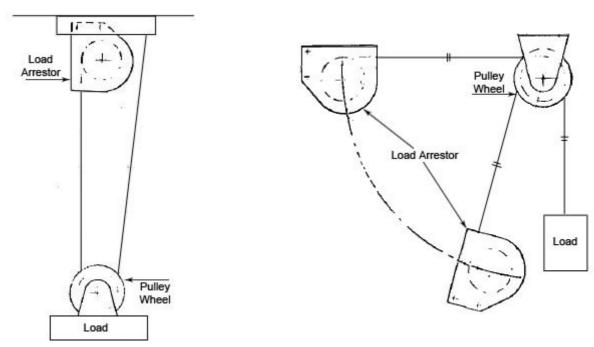

All units have to have a vertical feed to the unit although you can put the wire on a pulley so that it will work if an arc is required but will keep the feed vertical to the unit. In that case it would not halve the load or speed as you are only ensuring that the cable runs vertically.

Load Arrestors with Long Cable Lengths


If a customer requires a unit that has 60 metres of cable though only 30 metres ever needs to be recoiled inside the unit, this can be achieved by putting a clamp on the wire to keep the 30 metres from entering the unit. The only factor is that the recoil spring must be able to cope with the extra weight of the wire, I will do some tests and get you maximum lengths that can be left outside the housing. (See image to the below)





Lifting Equipment and Height Safety Specialists

Tel: +44 (0) 1977 684 600 Fax: +44 (0) 1977 685 300

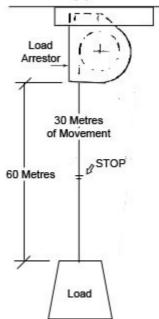

Main Features

- Reduces the risk of equipment damage and protects personnel.
- Three body sizes, small, medium, and large.
- Protect loads from 300kg up to 3000kg.
- · Variety of standard cable lengths (other specials available on request).
- Allows unrestricted movement of the protected load.
- Senses a fall speed and automatically engages.
- · Arrests falling materials over a short distance.
- · Absorbs the shock forces.
- Independent protection.

Applications

The Load Arrestors can be used in conjunction with a large variety of lifting devices, or protection of overhead loads:

- Hoists
- Lifts
- · Lighting rigs
- Tools / equipment
- Cranes

