



Annual visual inspection guide





General

Only persons that have successfully completed a SPERIAN rescue training with the SafEscape Elite or a Sperian competent person training are authorized to service the MILLER SafEscape Elite by an annual visual inspection.

The following instructions list the critical visual tests. If you have any questions in terms of conducting, please get in touch with your SPERIAN contact partner.

Safety notes

All parts that are relevant to safety are to be meticulously inspected and in the event the slightest doubt exists regarding signs of wear or tear on the part, we request that a new part be used to replace the questionable part. Please get in touch with your SPERIAN contact partner. Never repair and open the device yourself !



After unpacking the MILLER SafEscape ELITE™, check the serial number and check it in the equipment test sheet (manual for use).

It has to be observed, that the device was not opened by an unauthorized person (intact seal).



Inspect all sides of the equipment for visible damages.

Check for the existence of the guide pin.

Rope, end connections and karabiner have to be checked according „Vorschriften für Sachkundige für PSA gegen Absturz” .



Expert knowledge seminar



Function control:

- Rack out the rope with a weight (appr. 50 kg) over 1 meter height
- no noises (friction or loose fitting parts) should occur.
- the rope has to slide easily and smoothly through the device

Lifting test (new rope):

- to lift a load of 50kg > 15cm, If not, the pulley disc should be replaced.